



5



6



MUY IMPORTANTE: Apretar el pivote fuertemente. Asegurarse de que el pivote queda totalmente fijado.

VERY IMPORTANT: Press strongly the pivot. Make sure that the pivot is totally fixed

TRÉS IMPORTANT: Sérer fortement le pivot. S'assurer qu'il reste totalement fixé.

MOLTO IMPORTANTE: Premere il perno con forza. Assicurarsi che il perno sia completamente fissato.

SEHR WICHTIG: Zapfen besonders fest anziehen und sicherstellen, dass er sich nicht mehr bewegen kann.



INSTRUCCIONES DE MONTAJE
MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE
ISTRUZIONI DI MONTAGGIO
MONTAGEANLEITUNG

www.clm.es



ANTIROBO DE MANILLAR
 HANDLEBAR TO FRAME LOCK
 ANTIVOL BLOQUE-GUIDON
 ANTIFURTO BLOCCA-MANUBRIO
 DIEBSTAHLSCHUTZ SCOOTER

KYMCO PEOPLE S 125

BLINDADO
STAHL
5727327 - 5727328 - 5727329



¡LUBRICAR SÓLO CON ACEITE WD-40!
LUBRICATE ONLY WITH WD-40 OIL!
LUBRIFIER SEULEMENT AVEC WD-40!
LUBRIFICARE SOLO CON OLIO WD-40!
ALS SCHMIERMITTEL IST NUR ÖL
VOM TYP - WD 40 - ZU VERWENDEN

Sistema patentado
 Patented system
 Système brevété
 Sistema brevettato
 Patenteschutzsystem
 Empresa certificada
 Certified company
 Entreprise certifiée
 Azienda certificata
 TÜV Geprüfter Betrieb
 IFC 77377 -EU




DIN EN ISO 9001:2000
 Certificado Nº 01 100 048102

IFC 77377 -EU



1

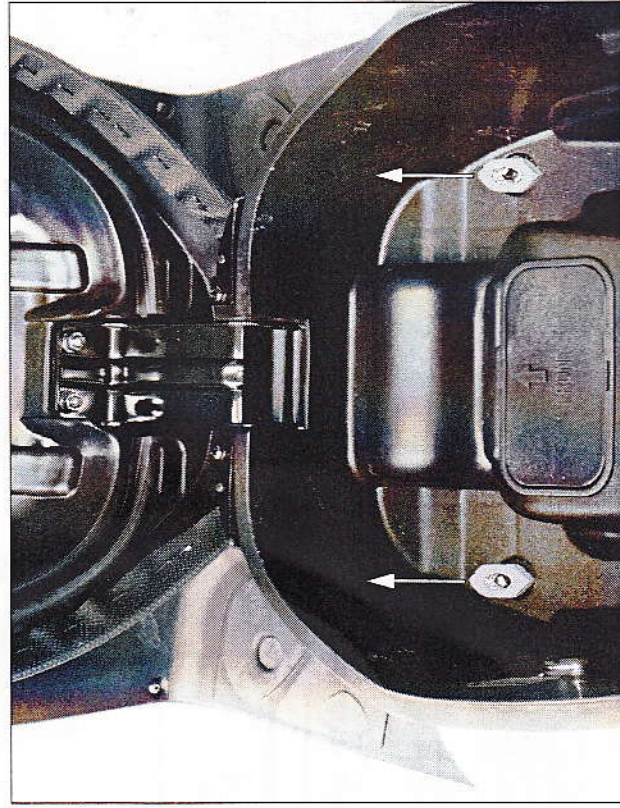

2

3 3

